


THRUSTMASTER PRE-DEFINED **DEFAULT** SETTINGS FOR FLIGHTDECK A32X

From FlightDeck Version 1.6.07 and newer








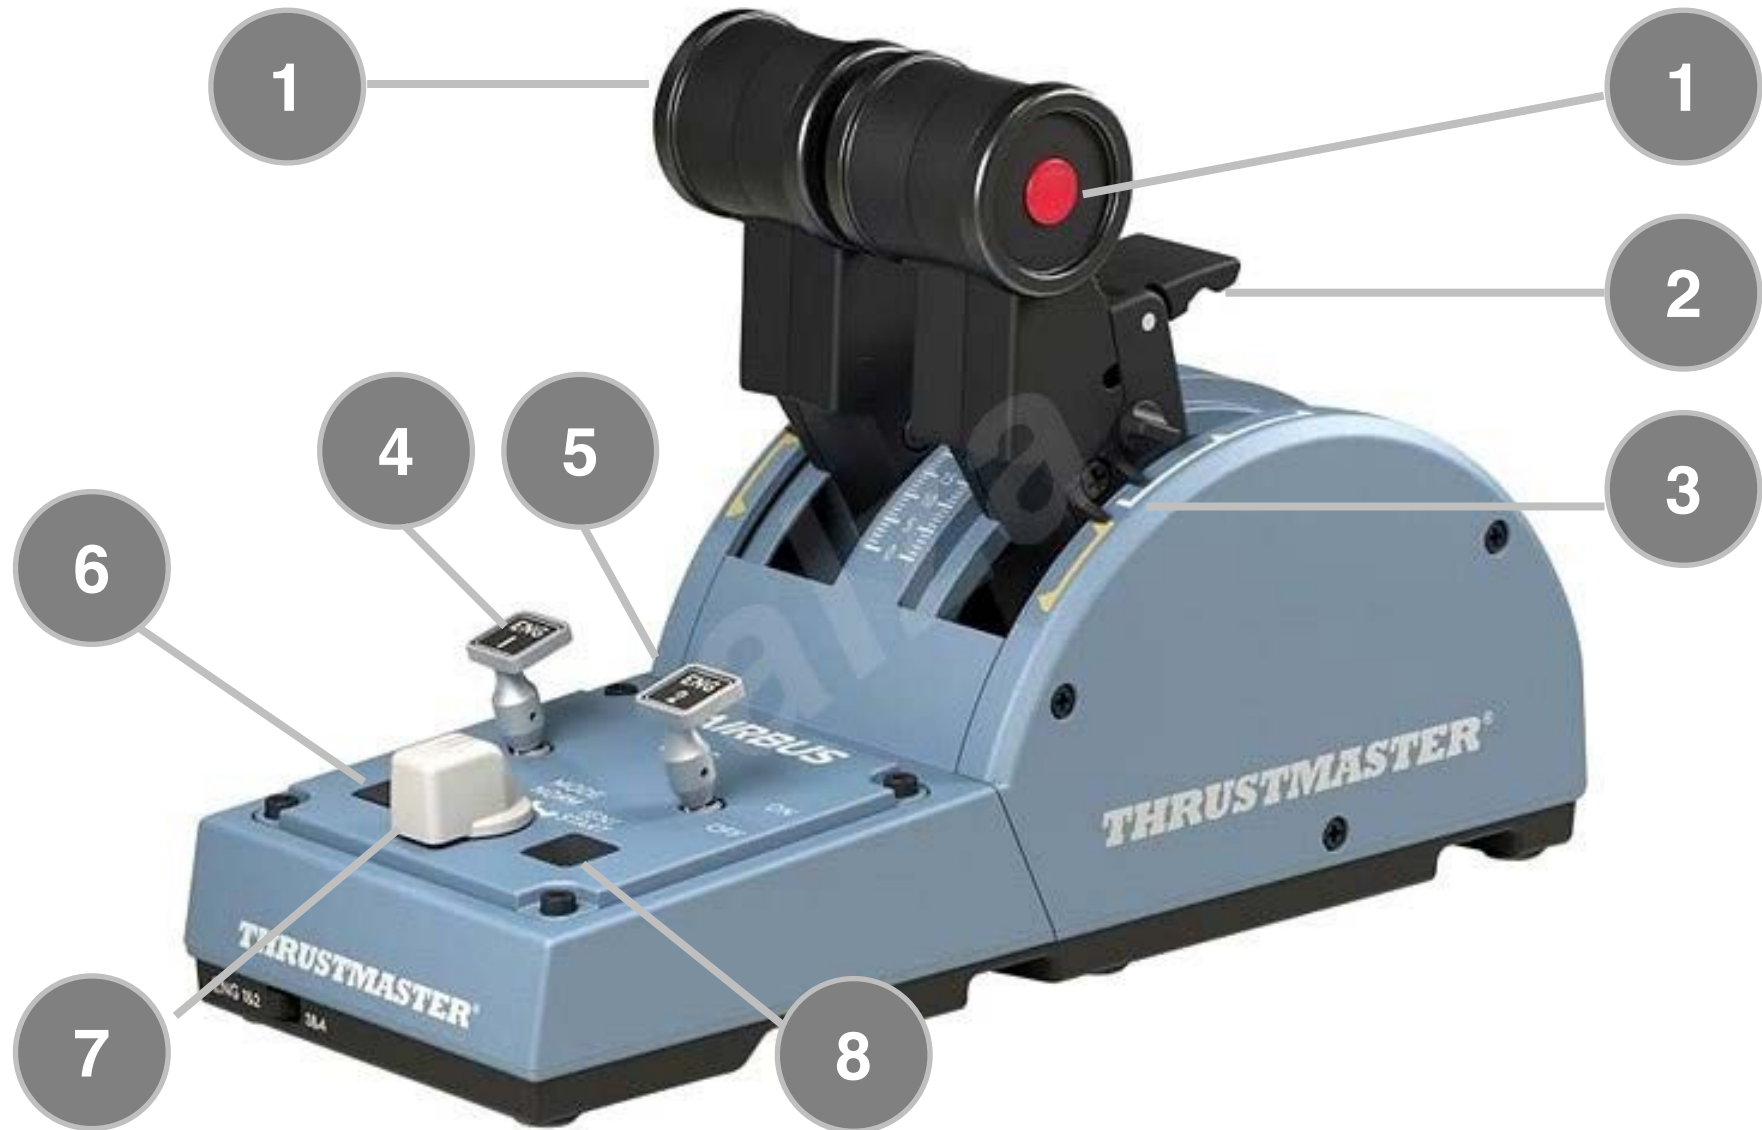

1	Autopilot OFF
2	View L/R Move L/R
3	Autopilot ON
4	Secondary Function *)
5	Zoom In
6	Zoom Out
7	Move Left
8	Move Right
9	Move Up
10	Move Down
11	Park BRK Brake apply
	B) THROTTLE function when only the Side Stick is attached - no THR hardware
12	Gear Up
13	Gear Down
14	Spoiler Arm Spd Brk In
15	Speed Brake Out
16	Flaps In
17	Flaps Out

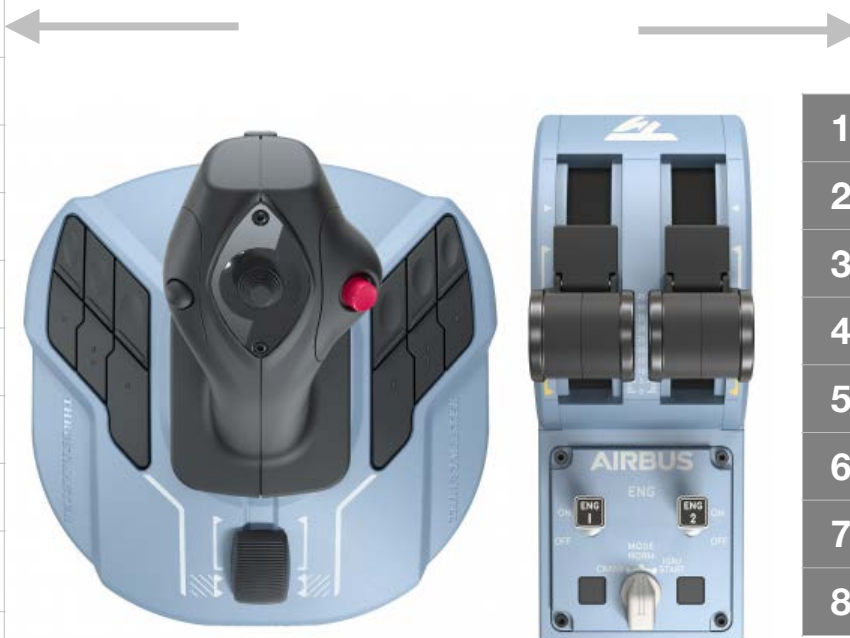

1	A/THR OFF
2	RVS
3	Thrust FLX, MCT, TOGA
4	ENG 1 Master Switch
5	ENG 2 Master Switch
6	* not used - (no Fire light)
7	ENG IGN/START
8	* not used - (no Fire light)

***) Secondary Functions:**
 While button #4 is pressed, then you access secondary functions. E.g. the coolie hat converts into a move around function instead of a view function.

*) You might set your own function for button #6 and #8. In the Airbus these are FIRE lights and cannot be pressed. Here these buttons do not have any LED lights.